

- 
1. Enter Programming, Installers Code (4112) + 8 + 0 + 0, Screen Displays  
"INSTALLER CODE 20"

---

  2. Press \*160, screen displays:  
Pager 1 Phn No.  
160  
Enter pager 1 phone number, up to 20 digits press [\*] if fewer than 20 digits are entered. To clear this field press \*160\*.

---

  3. Screen displays:  
Pager 1 Chars.  
161  
Enter up to 16 optional characters to be sent as a prefix, Press [\*] if fewer than 16-digits are entered. To clear this field press \*161\*.

---

  4. Screen displays:  
Pager 1 Rep Opt  
162  
Enter the types of reports to be sent to the pager for Partitions 1, 2 & Common:  
0=No Reports  
1=Open/Close for all users enabled to page  
4=All alarms & troubles  
5=All alarms, troubles, & open/close for users enabled  
12=Alarms & troubles for zones entered in zone list 9  
13=Alarms & troubles for zones listed in zone list 9 & open/close for all users enabled to page

---

  5. Screen displays:  
Pager 2 Phn No.  
163  
Enter pager 2 phone number up to 20 digits, press [\*] if fewer than 20 digits are entered. To clear this field press \*163\*.

---

  6. Screen displays:  
Pager 2 Chars.  
164  
Enter up to 16 optional characters to be sent as a prefix, press [\*] if fewer than 16-digits are entered. To clear this field press \*164\*.

---

  7. Screen displays:  
Pager 2 Rep Opt  
165  
Enter the types of reports to be sent to the pager for Partitions 1, 2, & Common:  
0=No Reports  
1=Open/Close for all users enabled to page  
4=All alarms & troubles
-

---

5=All alarms, troubles, & open/close for users enabled  
12=Alarms & troubles for zones entered in zone list 9  
13=Alarms & troubles for zones listed in zone list 9 & open/close for all users enabled to page

---

8. Screen displays:  
Pager 3 Phn No.  
166  
Enter Pager 3 phone number up to 20 digits, press [\*] if fewer than 20 digits are entered. To clear this field press \*166\*.
- 

9. Screen displays:  
Pager 3 Chars.  
167  
Enter up to 16 optional characters to be sent as a prefix, press [\*] if fewer than 16 digits are entered. To clear this field press \*167\*.
- 

10. Screen displays:  
Pager 3 Rep Opt  
168  
Enter the types of reports to be sent to the pager for Partitions 1, 2, & Common:  
0=No Reports  
1=Open/Close for all users enabled to page  
4=All alarms & troubles  
5=All alarms, troubles, & open/close for users enabled  
12=Alarms & troubles for zones entered in zone list 9  
13=Alarms & troubles for zones listed in zone list 9 & open/close for all users enabled to page
- 

11. Screen displays:  
Pager 4 Phn No.  
169  
Enter Pager 4 phone number up to 20 digits, press [\*] if fewer than 20 digits are entered. To clear this field press \*169\*.
- 

12. Screen displays:  
Pager 4 Chars.  
170  
Enter up to 16 optional characters to be sent as a prefix, press [\*] if fewer than 16 digits are entered. To clear this field press \*170\*.
- 

13. Screen displays:  
Pager 4 Rep Opt  
171  
0=No Reports  
1=Open/Close for all users enabled to page  
4=All alarms & troubles  
5=All alarms, troubles, & open/close for users enabled
-

---

12=Alarms & troubles for zones entered in zone list 9

13=Alarms & troubles for zones listed in zone list 9 & open/close for all users enabled to page

---

14. Press \*172, screen displays:

Pager Delay

172

Enter 0 to disable the delay or

1=1 minute

2=2 minutes

3=3 minutes

This determines the amount of time the panel will wait before attempting to dial the pager to allow central station to call & verify alarms.

---

15. Press \*99 to exit program mode.

---

16. Assign the user to page if doing open/close reporting to the pager:

Master/Part. Prog. Code + [8] + [user no.] + [#] [5] + 1 to allow paging or 0 for no paging.

---