

INSTALLATION GUIDE


Description

The MDC104 Coax Distribution Module provides distribution of one incoming coax signal (TV or Cable TV) to 4 locations, and Satellite TV to 2 locations. Please be sure to review this installation guide carefully prior to installing the module.

Installing the MDC104


Connecting TV and Cable TV

1. Route a RG6 coax cable between the video source (antenna or Cable TV) and the distribution module.
2. Connect the RG6 coax cable to the coax input on the top of the MDC104 coax distribution module.
3. Connect the RG6 coax cable running to the rooms (premise wiring) to the outputs on the front of the coax distribution module.

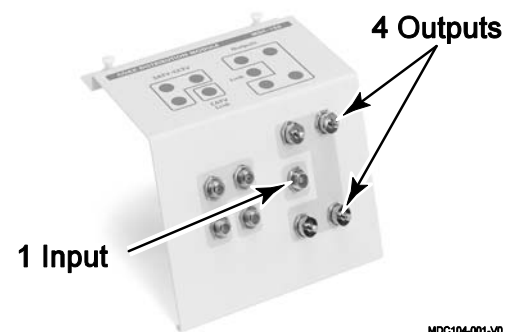

Connecting a dual LNB or Multi Satellite system

1. Route two or four RG6 coax cables between the Satellite Dish and the MDC104 coax distribution module. One will be designated as LNB A and the other as LNB B.
2. Connect the LNB A and LNB B RG6 coax cables coming from the Satellite dish to the SATV inputs on the back of the MDC104 coax distribution module.
3. Connect the RG6 coax cable running between the Satellite Receivers in the rooms and the SATV outputs on the front of the MDC104 coax distribution module.

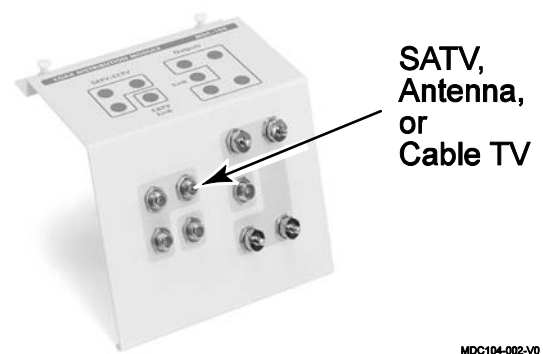

Note: If you are using MDP3 patch modules, use coax patch cords to connect the zones where the receivers are located with the SATV outputs.

Honeywell

165 Eileen Way, Syosset, New York 11791

Copyright © 2004 Honeywell International Inc.

www.honeywell.com/security



CSMDC104V1 9/04 Rev. A