

Via-30P Programming Hardwired Zones

- | | | | | | | | | | | | | | | | | | |
|-----------------------------------|--|----------------------|------------------|---------------------------|------------------------------|-----------------------|-----------------------|-------------------------------|-----------------------|-----------------------------------|----------------------|--------------------------|-------------------------------|---------------------------|--|------------------------|--|
| 1. | Enter Programming, Installers Code (4111) + 8 + 0 or Power down then back up & press the * + # keys simultaneously within 50 seconds. | | | | | | | | | | | | | | | | |
| 2. | Screen Displays, "INSTALLER CODE 20" | | | | | | | | | | | | | | | | |
| 3. | If using a 4219 or 4229 press "*" 25 & enter a 1 for 4219 & 2 for 4229 zone expander. 2. | | | | | | | | | | | | | | | | |
| 4. | Press "*" + 56, screen displays "ENTER ZN NUM. (00 = QUIT) 05". | | | | | | | | | | | | | | | | |
| NOTE: | Hardwired zones are 05-06 on the control and 10-17 if using a zone expander (4219/4229) | | | | | | | | | | | | | | | | |
| 5. | Press 05 + "*", screen displays "ZN ZT - RC IN : RT"
05 09 10 HW : 1 | | | | | | | | | | | | | | | | |
| NOTE: | This is a summary screen that displays the current values for this zone. ZN is the zone number, ZT is the zone response type, RC is the report code, IN is the input type & RT is the response time for the zone. | | | | | | | | | | | | | | | | |
| 6. | Press "*", screen displays "05 ZONE TYPE FIRE 09", If this is the desired zone type press "*" to continue or enter the desired value for this zone. | | | | | | | | | | | | | | | | |
| NOTE: | <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">00 = NOT USED</td> <td style="width: 50%;">09 = FIRE</td> </tr> <tr> <td>01 = ENTRY/EXIT #1</td> <td>10 = INTERIOR W/DELAY</td> </tr> <tr> <td>03 = PERIMETER</td> <td>20 = ARM-STAY*</td> </tr> <tr> <td>04 = INTERIOR FOLLOWER</td> <td>21 = ARM-AWAY*</td> </tr> <tr> <td>05 = TRBLE DAY/ALARM NIGHT</td> <td>22 = DISARM *</td> </tr> <tr> <td>06 = 24Hr. SILENT</td> <td>23 = NO ALARM RESPONSE</td> </tr> <tr> <td>07 = 24Hr. AUDIBLE</td> <td></td> </tr> <tr> <td>08 = 24Hr. AUX.</td> <td></td> </tr> </table> | 00 = NOT USED | 09 = FIRE | 01 = ENTRY/EXIT #1 | 10 = INTERIOR W/DELAY | 03 = PERIMETER | 20 = ARM-STAY* | 04 = INTERIOR FOLLOWER | 21 = ARM-AWAY* | 05 = TRBLE DAY/ALARM NIGHT | 22 = DISARM * | 06 = 24Hr. SILENT | 23 = NO ALARM RESPONSE | 07 = 24Hr. AUDIBLE | | 08 = 24Hr. AUX. | |
| 00 = NOT USED | 09 = FIRE | | | | | | | | | | | | | | | | |
| 01 = ENTRY/EXIT #1 | 10 = INTERIOR W/DELAY | | | | | | | | | | | | | | | | |
| 03 = PERIMETER | 20 = ARM-STAY* | | | | | | | | | | | | | | | | |
| 04 = INTERIOR FOLLOWER | 21 = ARM-AWAY* | | | | | | | | | | | | | | | | |
| 05 = TRBLE DAY/ALARM NIGHT | 22 = DISARM * | | | | | | | | | | | | | | | | |
| 06 = 24Hr. SILENT | 23 = NO ALARM RESPONSE | | | | | | | | | | | | | | | | |
| 07 = 24Hr. AUDIBLE | | | | | | | | | | | | | | | | | |
| 08 = 24Hr. AUX. | | | | | | | | | | | | | | | | | |
| | * These zone types can only be used for wireless zones. | | | | | | | | | | | | | | | | |
| 7. | Press "*" to continue, screen displays "01 REPORT CODE 1 ST 01 2 ND 00 10" & enter the report code for this zone. | | | | | | | | | | | | | | | | |
| NOTE: | Report code values are in hexadecimal form & range from 01-15. A = 10, but sends a 0 to central, B = 11, C = 12, D = 13, E = 14, & F = 15. | | | | | | | | | | | | | | | | |
| 8. | Press "*" to continue, screen displays "01 RESP TIME 1" & enter the response time, values are as follows: 0 = 10mSec, 1 = 350mSec, & 2 = 700mSec. NOTE: If programming 10-17 this question will not come up. | | | | | | | | | | | | | | | | |
| 9. | Press "*" to continue, screen displays "ZN ZT - RC IN : RT"
05 09 - 10 HW : 1

This is the ending summary screen & shows any changes made to this zone.
NOTE: If programming zones 10-17 AW will be shown under IN. | | | | | | | | | | | | | | | | |
| 10. | Press "*" to continue, screen displays "PROGRAM APLHA? 0 = NO , 1 = YES 0". If you want to program alpha descriptors for this zone press 1 & refer to adding descriptors document, otherwise press 0. | | | | | | | | | | | | | | | | |
| 11. | Screen displays "ENTER ZN NUM. (00 = QUIT) 06" & repeat steps 3-9 or press 00 to exit the *56 menu mode, then press "*" + 99 to exit program mode. | | | | | | | | | | | | | | | | |