

ADEMCO GROUP TECHNICAL SUPPORT KNOWLEDGEBASE  
STEP-BY-STEP PROCEDURE

Created: 8.31.2001  
Modified: 8.31.2001  
File: V15p\_23.Doc  
Pages: 1

---

Product: **Vista-15P**

Title: **Installing the 5800TM Module**

Installation of this module is necessary only if you are using one or more 5827BD wireless bi-directional keypads, 5804 or 5804BD/V transmitters (wireless keys).

**Mounting the 5800TM Module**

The 5800TM must be located next to the RF receiver (between one and two feet from the receiver's antennas). The 5800TM must **NOT** be installed within the control cabinet. Mount the unit using its accompanying mounting bracket.

**Wiring the 5800TM Module**

Connect the 5800TM to the control panel's keypad connection terminals, using the supplied connector with flying leads, as follows:

<b>Wire</b>	<b>Terminal on Control</b>
BLACK (Ground)	Terminal 4
RED (+12VDC)	Terminal 5
GREEN (Data to Control)	Terminal 6
YELLOW (Data from Control)	Terminal 7
BLUE: Not Used	

You **MUST** cut the RED jumper on the 5800TM when using it with the VISTA-15P. For additional information, refer to the 5800TM's instructions.