

Created: 3.27.2000
Modified: 3.27.2000
File: V10se_14.Doc
Pages: 3

Product: Vista-10SE
Title: Programming 4204 Relay

-
1. Enter program mode by powering down then back up & pressing the *+# simultaneously within 50 seconds of power up, or enter the Installer code (4111) + 8 + 0.
 2. Screen displays, "INSTALLER CODE 20"
 3. Press "*" 25, screen displays "WIRE EXP. 25" enter (3) for 4204 relay.
-

NOTE: This device must be addressed to 1, dip switch 2 off.

4. Press "*" 80, screen displays:
Enter Device No.
(00 = Quit) 01
Enter the Device Number **01, 02, 03, or 04** for a 4204.
 5. Screen displays:
02 A EV ZL ZT
STT 0 0 0 00 1
This screen displays a summary of the current Device START programming (for this example, device 02 has been selected).
Press * to continue.
 6. Screen displays:
02 A EV ZL ZT
STP -- 0 00 1
This screen displays a summary of the current Device STOP programming.
Press * to continue.
 7. Screen displays:
02 Device Action
No Response 0
Enter the desired device action as listed below. Press * to continue.
0 = No response 2 = Stay Closed
1 = Close for 2 seconds 3 = 1 second On/Off
 8. Screen displays:
02 Start Event
Not Used 0
Enter the event to *start* the relay:
0 = Not used; 2 = Fault; 1 = Alarm; 3 = Trouble
A zone list must be used in conjunction with an event. If a zone type/system operation is to be used instead of an event, enter 0.
Press * to continue.
-

Created: 3.27.2000
Modified: 3.27.2000
File: V10se_14.Doc
Pages: 3

9. Screen displays:
02 Start:Zn List
No List 0
If a zone list will be used to *start* the relay action, enter the zone list number (to be programmed in field * 81): 1, 2, or 3. If not used, enter 0. Press * to continue.

10. Screen displays:
02 Start:Zn Typ
Not Used 00
If a zone type or system operation will be used to START the device action, enter the appropriate 2-digit code (see table that follows). If not, enter 00.
Press * to continue.

NOTE: CHOICES FOR ZONE TYPES

**00 = Not Used 04 = Interior Follower 08 = 24-Hr Aux
01 = Entry/exit #1 05 = Trouble Day/Alarm Night 09 = Fire
02 = Entry/exit #2 06 = 24-Hr Silent 10 = Interior w/Delay
03 = Perimeter 07 = 24-Hr Audible 24 = Silent Burglary**

CHOICES FOR SYSTEM OPERATION

**20 = Arming–STAY 36 = At Bell Timeout†
42 = System Battery Low
21 = Arming–AWAY 38 = Chime 43 = Comm Failure
22 = Disarming (Code + OFF) 39 = Any Fire Alarm 52 = Kissoff
31 = End of Exit Time 40 = Bypassing 58 = Duress
32 = Start of Entry Time 41 = AC Power Failure
33 = Any Burglary Alarm**

†

Or at Disarming, whichever occurs first.

11. Screen displays:
02 Stop:Zn List
No List 0
If a zone list will be used to Stop, or *restore*, the device action, enter the zone list number 1, 2, or 3 (to be programmed in * 81 mode). If not used, enter 0.
Press * to continue.

12. Screen Displays:
02 Stop:Zn Typ
Not Used 00
If a zone type or system operation will be used to Stop the device action, enter the appropriate 2-digit code (refer to the “**CHOICES FOR ZONE TYPES**” listed above). If not, enter 00.
Press the * key to continue.

Created: 3.27.2000
Modified: 3.27.2000
File: V10se_14.Doc
Pages: 3

-
13. Screen displays:
02 A EV ZL ZT
STT 0 0 0 00
This screen again displays a summary of the current device Start (STT) programming. Press * to continue.
-
14. Screen displays:
02 A EV ZL ZT
STP -- 0 00
This screen again displays a summary of the current device Stop (STP) programming. Press * to continue.
-
15. The display then returns again to the first screen so that the next device number to be programmed can be entered. Enter 00 to end relay programming.
-
-