

## MDC108500 2 GHz Coax Distribution Panel

### INSTALLATION GUIDE


#### Description

The MDC108500 Coax Distribution Module provides distribution of one incoming coax signal (TV or Cable TV) to eight locations, and Satellite TV to four locations. Please be sure to review this installation guide carefully prior to installing the module.


#### Installing the MDC108500

##### Connecting TV and Cable TV

1. Route RG6 coax cable between the video source (antenna or Cable TV) and the distribution module.
2. Connect the RG6 coax cable to the coax input on the rear of the MDC108500 coax distribution module.

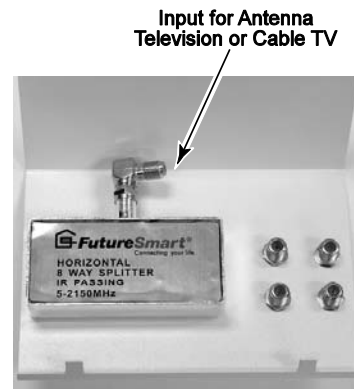


3. Connect the RG6 coax cable running to the rooms (premise wiring) to the outputs on the front of the coax distribution module.

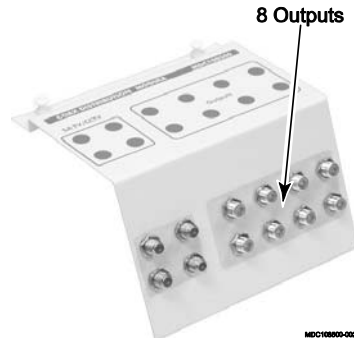


Note: If you are using MDP3 patch modules, use coax patch cords to connect the zones and the outputs.

##### Connecting Satellite TV (KU Band Only)

1. Route two RG6 coax cables between the Satellite Dish and the MDC108500 coax distribution module. One will be designated as LNB A and the other as LNB B.
2. Connect the LNB A and LNB B RG6 coax cables coming from the Satellite dish to the SATV inputs on the back of the MDC108500 coax distribution module.

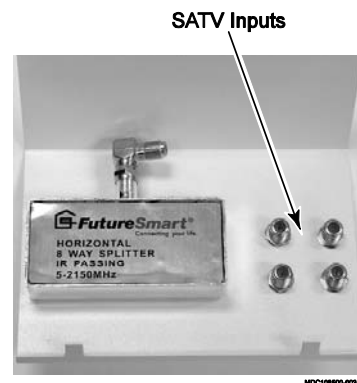

3. Connect the RG6 coax cable running between the Satellite Receivers in the rooms and the SATV outputs on the front of the MDC108500 coax distribution module.

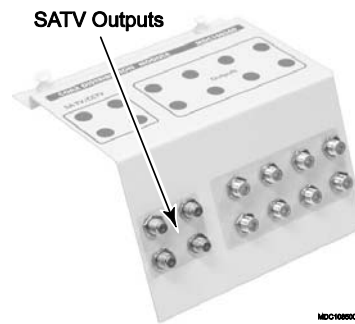

Note: If you are using MDP3 patch modules, use coax patch cords to connect the zones where the receivers are located with the SATV outputs.

# Honeywell

165 Eileen Way, Syosset, New York 11791

Copyright © 2004 Honeywell International Inc.

[www.honeywell.com/security](http://www.honeywell.com/security)



CSMDC108500V1 9/04 Rev. A