


Options for External Sounders on the LYNX Touch

The LYNX Touch is intended to use the 5800Wave Wireless Siren if additional sounding is needed. There is no Siren output. If you want to add Hardwire Sirens you have the two options below.


1. If you desire a sounder in a location where you cannot get a wire from the LYNX Touch you have the option to use a Wireless 5800RL following this setup:

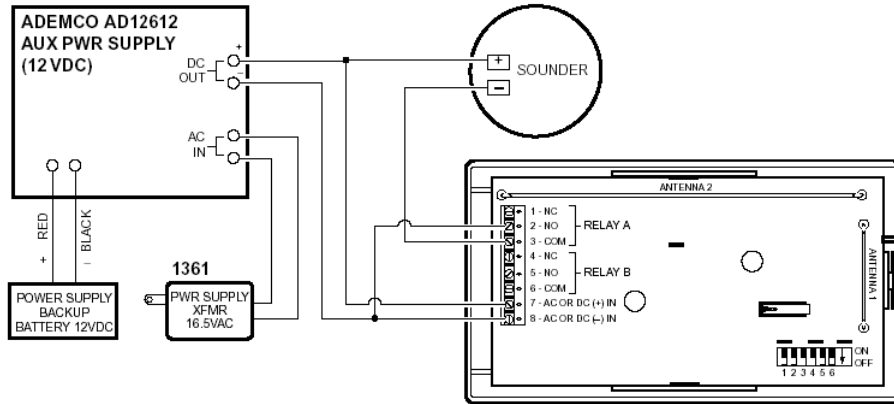

2. If you can get a wire from the LYNX Touch to where you want the sounder you can use this setup: (An Altronix RBSN-TTL relay and power supply are required)

Due to the 3mA current limit of the LYNX Touch output trigger, the Altronix TTL Sensitive relay must be used. A jumper wire is required from TRG+ to the POS+ terminal, as well as a common ground.

In Device or Rule Programming, program the Trigger with an Action and Start and Stop event, such as “Permanent On, Start on System Operation-Any Burglar Alarm, Stop on System Operation-Bell Timeout

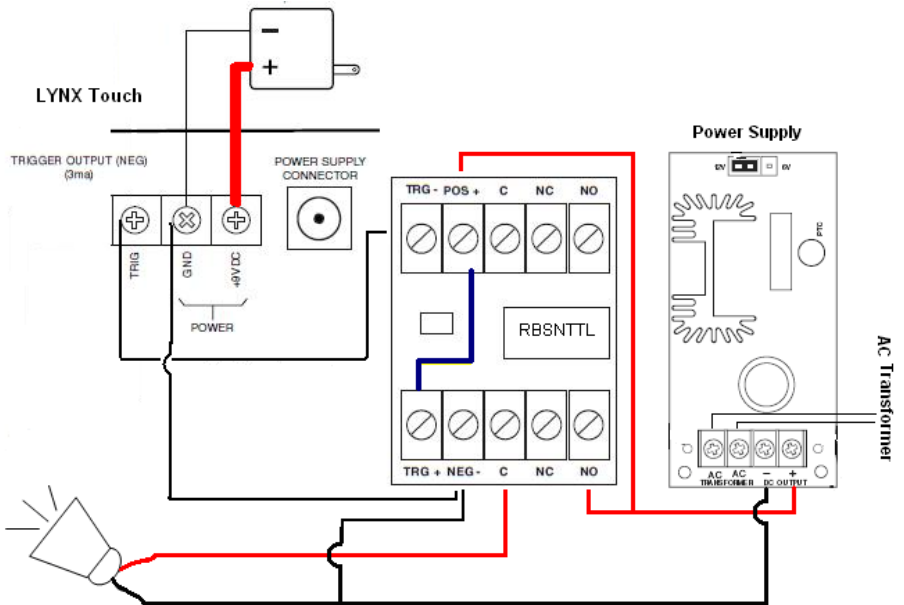

NOTE: The Trigger can be programmed to start on System Operation 'Any Burg' or 'Any Fire'.

System Operation 'Any Burg' encompasses alarms on **these zone types**:

- Entry/Exit #1, Entry/Exit #2
- Perimeter, Interior Follower, Interior Delay, **Silent Burglary Alarm**
- Trouble Day/Alarm Night
- 24 Hr. Silent Alarm** and 24 Hr. Audible Alarm

System Operation 'Any Fire' encompasses alarms only on Fire Without Verification zone type